GE
Lighting

Installation Guide

GE LED Flush Mount Ceiling Fixture

Model Number: LED15FM12-W

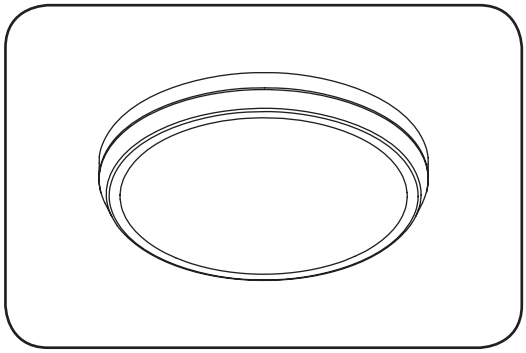

BEFORE YOU BEGIN

Read these instructions completely and carefully.

⚠ WARNING/AVERTISSEMENT	
RISK OF ELECTRIC SHOCK • Turn power off before inspection, installation or removal. • Properly ground electrical enclosure. **RISK OF FIRE** • Follow all NEC and local codes. • Use only UL or IEC approved wire for input/output connections. Minimum size 18 AWG (0.75mm^2).	**RISQUES DE DÉCHARGES ÉLECTRIQUES** • Coupez l'alimentation avant d"inspecter, installer ou déplacer le luminaire. • Assurez-vous de correctement mettre à la terre le boîtier d'alimentation électrique. **RISQUES D'INCENDIE** • Respectez tous les codes NEC et codes locaux. • N'utilisez que des fils approuvés par UL pour les entrées/sorties de connexion. Taille minimum 18 AWG (0.75mm^2).

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This Class [A] RFLD complies with the Canadian standard ICES-003. Ce DEFR de la classe [A] est conforme à la NMB-003 du Canada.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Save These Instructions

Use only in the manner intended by the manufacturer.
If you have any questions, contact the manufacturer.

Components Supplied

- Wire nuts (2)
- Screws (2)
- Fixture (1)
- Bracket (1)

Prepare Electrical Wiring

Electrical Requirements
The LED luminaire must be connected to the mains supply according to its ratings on the product label.

Model No.	Input Voltage	Input Frequency	Input Wattage	Input Current
LED15FM12-W	95-132V	50/60Hz	15W	0.180A

Grounding Instructions
The grounding and bonding of the overall system shall be done in accordance to local electric code of the country where the luminaire is installed.

imagination at work

Installation

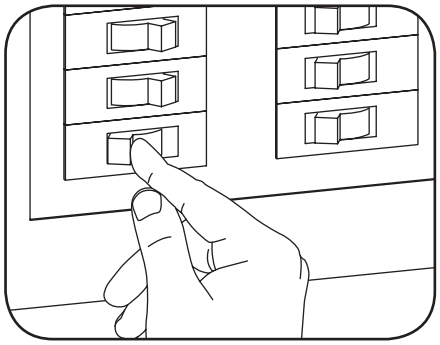

1 **TURN OFF POWER** at the source.

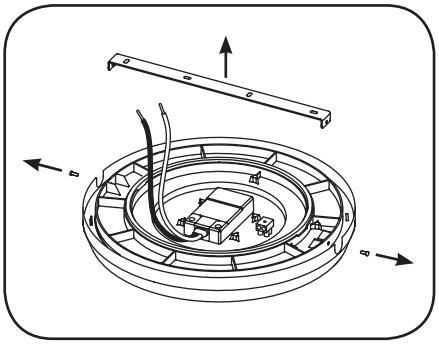

2 Remove two screws to detach bracket.

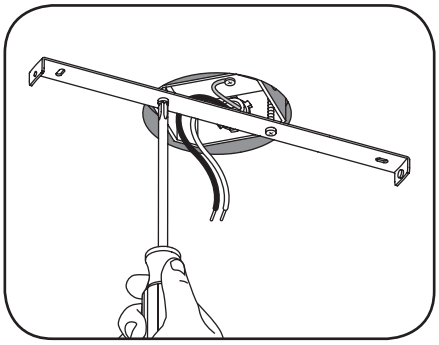

3 Fasten bracket to junction box in ceiling.

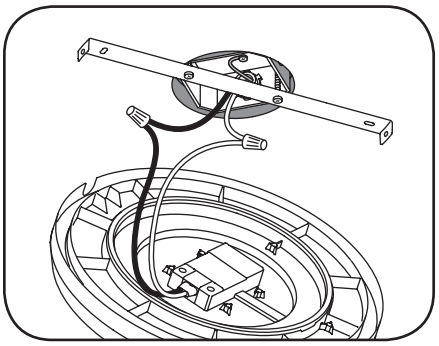

4 Connect white wire to neutral wire and black wire to live wire using wire nuts.

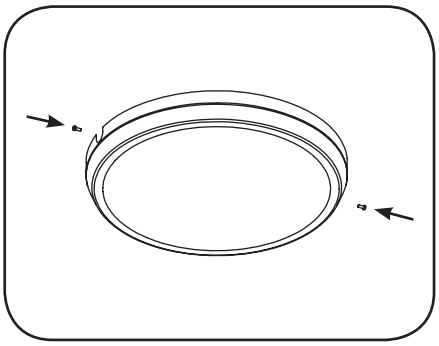

5 Place fixture over bracket and fasten with two screws.

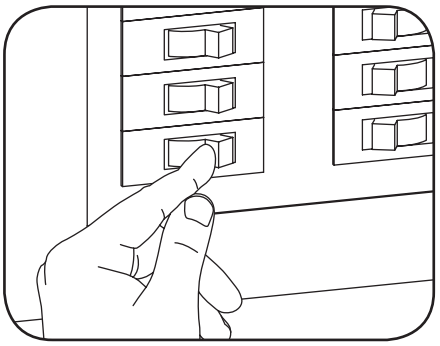

6 Restore power.

⚠WARNING: RISK OF INJURY, RISK OF DAMAGE!

Luminaire may fall if inner bezel is not secured properly to outer bezel. Ensure that the whole loop is positioned and secured under the washer.

GE Lighting • 1-888-MY-GE-LED **(1-888-69-43-533)** • www.gelighting.com

The GE brand, logo are trademarks of the General Electric Company.
© 2014 GE. Information provided is subject to change without notice. All values are design or typical values when measured under laboratory conditions.